



Solving your relay requirements since 1922

Amperite Co.
567 52nd Street
P.O. Box 329
West New York, NJ 07093
(800) 752-2329
www.Amperite.com

Ordering Information:

Definition of a part number for the Amperite
DFW Series Flasher.

Example:

12 F 110 H DFW
↑ ↑ ↑ ↑ ↑
A B C D E

A: Denotes nominal input voltage: Voltage Available

B. Denotes flasher configuration.

C. Denotes form of termination - H = #14 gauge flexible wire

L = quick connect input and load terminals

E. Denotes DFW Series alternating flasher.